

Shoe Adapter (Converts 1/4"-20 to shoe)

Wish you had more Shoe Mounts on your camera? Use the XTENDER® Shoe Adapter to convert all those 1/4"-20 threaded holes into shoes.

Reference: X-CSR-10
EAN13: 859005002171



The XTENDER® (X-CSR-10) Shoe Adapter will attach to the upper arm of the XTENDER® Arm Kits so that you can utilize your shoe mount accessory. You can also use the Shoe Adapter to convert any 1/4"-20 screw mount to a shoe mount.

A removable stop screw gives more stability to your accessory.

Caractéristiques :

Poids (kg): 0,057

Dimensions en mm (L x l x H): 152,4 x 76,2 x 38,1

Couleur: Noir