



Switch 3/3 rail 60

Switch for triple cyclorama Rail Type 60 system. To connect parking rails or feeding rails to the main curtain rail system. Closed loop curtain systems require switches for inserting or removing curtains for maintenance.

Reference: FF3765

EAN13: -



Switch for triple cyclorama Rail Type 60 system. To connect parking rails or feeding rails to the main curtain rail system. Closed loop curtain systems require switches for inserting or removing curtains for maintenance.

Caractéristiques :