
Adaptateur 14.4V pour caméra SONY EX1/EX3

14.4V Adapter for SONY EX1/EX3 camera

Reference: XP-EX-S

EAN13: -

PRO-X



Using brick battery to output 14.4V for SONY EX1/EX3 camera

Caractéristiques :

Application: Using brick battery to output 14.4V for SONY EX1/EX3 camera