

---

# RDM Communicator

Reference: 10080190

EAN13: -



The RDM communicator is a tool box for remote setting of Robe and Anolis fixtures via DMX link. Its main purpose is to set fixture options (DMX address, DMX mode...etc) for Anolis non-display fixtures like ArcPad Xtreme, ArcPad 48 Integral but can be used with any Robe or Anolis fixtures which support RDM protocol.

## **Caractéristiques :**